

CS47 GSM

Phone Line Backup

Installation and Programming Guide



INTRODUCTION.....	3
General Specification:	3
Basic Functionality	3
Reduction of Costs	3
Password Protection	4
Operation	4
SMS support	4
Inputs.....	4
Outputs.....	4
SIM card	4
Connecting the CS-47	5
CS-47 PC software	6
Translations.....	6
Software installation	6
Configuration of the CS-47 unit.....	7
Configuring system inputs.....	8
Defining Input Telephone Numbers	8
Defining SMS Messages for Inputs.....	9
Configuring System Outputs	10
Defining Output Parameters	10
Triggering the System	11
Configuration of the miscellaneous page.....	13
Configuration of the “ low power” message :	13
Configuration of the “Test message” area	13
Configuration of the “phone line ” area	14
Add prefix number.....	15
Communication page	16
cellular dial prefix	16
communication with the unit.....	16
File Options	17
Using the CS47 after it was installed	18
Sending SMS Messages.....	18
Output operation by SMS.....	18
Activating and Deactivating the System.....	19
Changing the User Password	19
Handling Received SMS Messages.....	19

1 INTRODUCTION

The CS-47 is a cellular backup to PSTN phone line system.

When connected to an alarm control panel, the CS-47 operates as a GSM back up unit to a PSTN line, enabling to re-direct incoming and outgoing calls to the GSM network in case of regular phone line failure.

1.1 General Specification:

- Built-in Tri-Band GSM transceiver
- Continuous PSTN line supervision
- GSM backup at PSTN Line failure
- Programmable SMS messages
- Multi language support for SMS and for PC graphical interface
- 4 inputs for SMS and output operation
- 4 outputs operated either locally or by SMS
- Battery backup support including charger
- Status report by SMS messages
- Cheaper call routing to GSM when dialing to a cellular number

1.2 Basic Functionality

The Mobile Bridge provides operators the means to connect to various inputs and output devices. It uses cellular technology to send and receive messages, allowing operators to monitor and control the required devices. For example, the Mobile Bridge sends an SMS to the security center if an office has been entered without authorization.

1.3 Reduction of Costs

With the CS-47, all telephone landlines (PSTN) are routed through the CS-47 unit, together with the cellular modem that is connected to the CS-47. Certain telephone calls are then routed through the CS-47 modem. This reduces costs on these telephone calls, because the System automatically selects the least expensive route and diverts calls to either the landline or the cellular line, as relevant. The switch is according to a programmable prefix number, when the unit detects this prefix number that was programmed it switches the call to the cellular line although a PSTN line is connected.

1.4 Password Protection

The Mobile Bridge uses two different kinds of passwords to ensure System Security:

Program password –allows users defined as System Administrators to access the configuration program and change the System configuration as required.

This password is not available to end-users.

User password –used in SMS messages by end-users to trigger various events for the input and output devices defined in the System.

Both passwords must consist of four characters

1.5 Operation

The system powered by 14VDC with a 12V/1.3A backup battery. The battery is recharged by the system.

1.6 SMS support

The CS-47 support programmable SMS messages, the messages are programmed by Crow PC software and downloaded to the system by a D-Link cable. The system support multi language SMS messages

1.7 Inputs

The CM-18 offers 4 digital inputs. Every input trigger generates an SMS message to a programmed number and activates an output.


1.8 Outputs

The CS-47 has 4 programmable outputs. 4 open drain FET outputs, output number 1 is also a dry contact relay in parallel. The outputs can be operated locally according to inputs triggering or by SMS (by remote).

1.9 SIM card

The CM-18 supports 1.8V / 3V / 5V SIM cards. Before entering a SIM card to the CM18 the pin code should be cancelled for that SIM card, you can cancel the pin code using any kind of mobile phone.

2 Connecting the CS-47

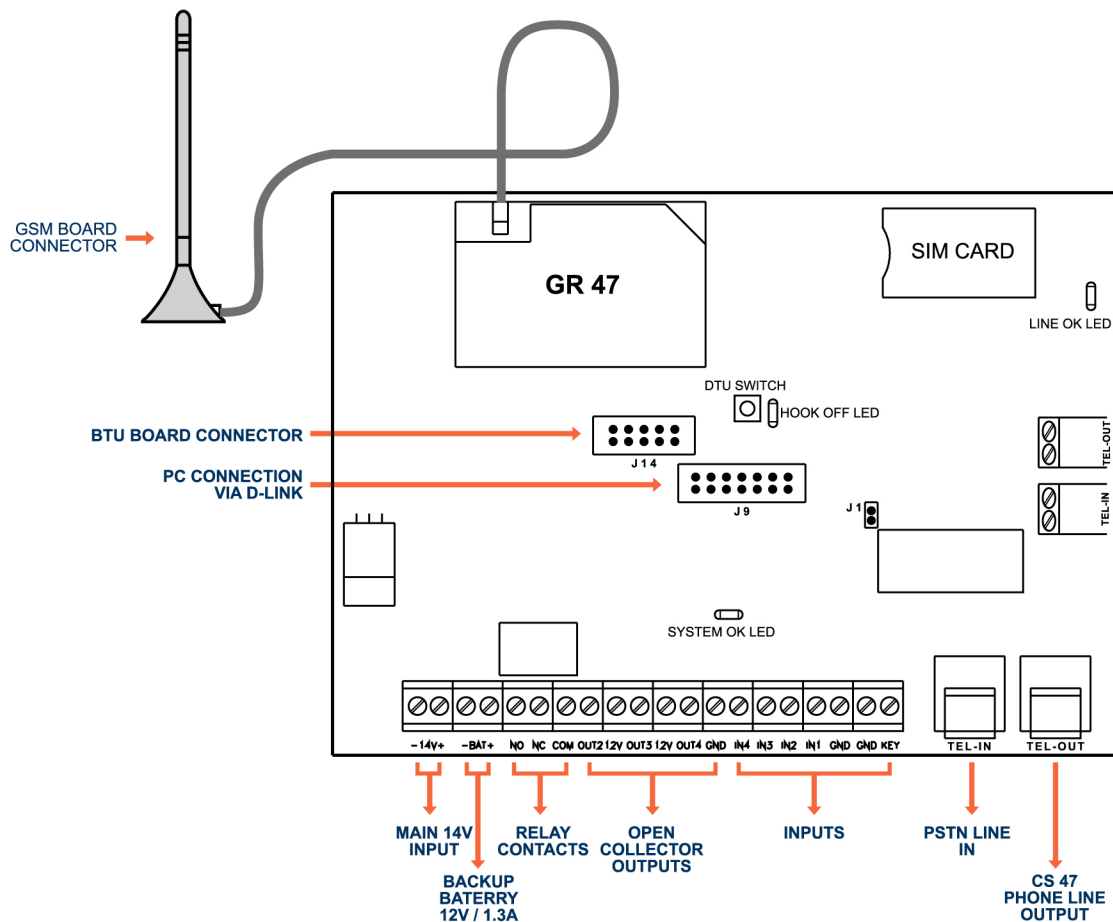

TEL-OUT: phone line output supplied to an external system, RJ11 connector or terminal block

TEL-IN: PSTN phone line input (main phone line), RJ11 connector or terminal block

Main power supply: 13.8 VDC supplied by external power source or panel

Battery: 12V / 1.3A

Antenna: dual band GSM antenna.

Inputs: 4 digital inputs and a key input, in order to trigger an input you need to pull the input low (connect ground)

Outputs: 4 digital open drain outputs and a dry contacts relay (the relay is in parallel to output 1).

Indication LED's

System OK led – blinking when the system is ready for use

Hook off led: the led is “on” when the external system picks up the phone (goes off hook).

Line OK led – light when PSTN line exists.

3 CS-47 PC software

The CS-47 PC software is a graphical user interface (GUI) to be used in order to configure the unit.

3.1 Translations

The GUI can be translated to various languages, the text and the tool tip box can be translated by translating the texts in two files in the software folder:

“:\Program Files\CS47”.

The files to be translated are frmEdit.txt and frmEditToolTip.txt.

3.2 Software installation

To install the configuration program, perform the following steps:

1. From the CD that comes with the CS47 package, double-click the setup file.
2. Follow the steps in the setup wizard to select the required location on the local hard drive.

Configuration of the CS-47 unit

The configuration of the CS-47 can be in 3 different ways:

1. Local configuration – using crow graphical interface (PC software), connecting via D-link cable
2. Local configuration – using crow DTU board, in order to use the DTU board the configuration must be load to the board before the installation from a programmed CS47 unit
3. Remote configuration – using a cellular modem with sim card in the same network, the tool for the configuration is the PC software.

Graphical User Interface

The graphical user interface of the Mobile Bridge configuration wizard consists of one window with four tabs, each containing parameters to configure various options. The tabs are as follows:

Input – Use to configure up to four System inputs.

Output – Use to configure up to four System outputs.

Miscellaneous – Use to configure general System parameters.

Communication – Use to select the telephone dialing prefix that will be recognized by the System, for least cost call routing, and for communicating with the unit.

Each tab contains a number of areas. For example, the Input tab contains an area to select a specific input, an area to define the phone numbers that will receive SMS messages about the input, and an area to define the messages themselves

3.3 Configuring system inputs

3.3.1 Defining Input Telephone Numbers

The Mobile Bridge allows the definition of up to four telephone numbers per system input. SMS messages concerning the state of the relevant input are sent to these numbers.

To define the telephone numbers for each input, perform the following steps:

1. Click the **Input** tab.
2. From the **Input Number** drop-down list, select the desired input number.
3. Select the **Enable** checkbox next to each telephone number that will be used.
4. In the **Phone Number** area, enter the telephone numbers that will receive

SMS messages for the relevant input number.

Note: Click **Copy Phones** to copy these phone numbers to all other telephone input fields, for use with other inputs.

The screenshot shows the 'Input' tab of the CS4721/06/04 software. The window title is 'CS4721/06/04 C:\Program Files\CS47\CS47 default.dat'. The 'Input' tab is selected, with other tabs being 'Output', 'Miscellaneous', and 'Communication'. The 'Input number' is set to '1'. The 'Phone numbers' section has four rows, each with an 'Enable' checkbox and a text field for the phone number. All four checkboxes are unchecked, and all text fields contain '0'. A 'Copy Phones' button is located to the right of these fields. The 'Messages' section contains a table with columns: 'Enable', 'State', 'Message', 'Characters left', 'Detect time [seconds]', 'Delay time [seconds]', 'Repeat message [minutes]', and 'Outputs list' (with sub-columns 1, 2, 3, 4). There are two rows of messages: 'ALARM' and 'ALARM RESTORED'. The 'ALARM' row has 'On' state, 55 characters left, 1 second detect time, 10 second delay time, 0 minutes repeat time, and output 1 is checked. The 'ALARM RESTORED' row has 'Off' state, 46 characters left, 1 second detect time, 10 second delay time, 0 minutes repeat time, and all outputs are unchecked. At the bottom, there are buttons for 'To CS47', 'Load file', 'Save file', 'From CS47', and 'Exit'.

Enable	State	Message	Characters left	Detect time [seconds]	Delay time [seconds]	Repeat message [minutes]	Outputs list
							1 2 3 4
<input type="checkbox"/>	On	ALARM	55	1	10	0	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/>	Off	ALARM RESTORED	46	1	10	0	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>

3.3.2 Defining SMS Messages for Inputs

The Mobile Bridge allows the definition of different SMS messages to be sent, depending on the state of the input. For this reason, the Message area of the Input window contains two Message fields. These fields correspond to the two possible states of an input, which are as follows:

- On –The input device is running (the input has changed from “high” to “low”)
- Off –The input device is not running (the input has changed from “low” to “high”)

To define the SMS messages to be sent for each input state, perform the following steps:

1. Click the **Input** tab.
2. In the **Messages** area, select the **Enable** checkbox for each state for which a message is to be enabled.
3. In the **Message** field corresponding to the enabled state, enter the SMS message to be sent.
Note: The **Chars Left** field displays the permitted number of characters remaining for each message. This is a read-only field.
4. Define the **Detect** time (in seconds) for the message. The Detect time is the amount of time an event must continue in order to trigger the SMS.
5. Define the **Delay** time (in seconds) for the message. The Delay time is the amount of time it takes to trigger the SMS after an event has occurred.
6. Define the **Repeat** time (in minutes) for the message. The Repeat time is the interval at which the SMS is re-sent, if the status of the input does not change.
7. In case you need an output to be activated on an input triggering choose an output number (one of the outputs).

3.4 Configuring System Outputs

The CS-47 allows the configuration of up to four output devices. The configuration procedure for each output device includes defining the normal status of each device.

An output can be activated in two different ways:

Locally – activate an output when an input is triggered. defined in the input page

By SMS – activation of an output by remote using SMS messages.

Selected when enabling the checkbox in the output page.

Note: if one of the option selected than the other option is disabled.

The screenshot shows the 'Output' tab of the CS4721/06/04 configuration software. The window title is 'CS4721/06/04 C:\Program Files\CS47\CS47 default.dat'. The 'Input' tab is selected, showing 'Input number : 1'. The 'Phone numbers' section has four 'Enable' checkboxes (No. 1, No. 2, No. 3, No. 4) and text boxes for phone numbers (all set to 0). A 'Copy Phones' button is on the right. The 'Messages' section has a table with columns: Enable, State, Message, Characters left, Detect time [seconds], Delay time [seconds], Repeat message [minutes], and Outputs list (1, 2, 3, 4). The table contains two rows: 'On' with message 'ALARM' and 'Off' with message 'ALARM RESTORED'. The 'Outputs list' column has checkboxes for each output, with the first checkbox (for output 1) checked in the 'On' row. At the bottom are buttons: 'To CS47', 'Load file', 'Save file', 'From CS47', and 'Exit'.

Enable	State	Message	Characters left	Detect time [seconds]	Delay time [seconds]	Repeat message [minutes]	Outputs list
<input type="checkbox"/>	On	ALARM	55	1	10	0	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
<input type="checkbox"/>	Off	ALARM RESTORED	46	1	10	0	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>

3.4.1 Defining Output Parameters

Defining the output parameters includes enabling or disabling each device, and defining the normal state of each. This tab also allows the System Administrator to change the user password, if necessary.

To define output parameters, perform the following steps:

1. Click the **Output** tab.
2. To change the user password, enter the new password in the User Password field.

Note: The user password must consist of four characters.

3. Select the **Enable** checkbox for the first output to be defined. ("Enable SMS Control")

4. Select the normal state of the output. Options are:

NO – normally open: the output device is normally enabled

NC – normally close: the output device is normally disabled

5. Specified Time (pulse) – if an SMS message is sent to trigger an event, specify the length of time (in seconds) for which the event will occur:

a. Select the pulse checkbox. Regardless of the event that is triggered (normally open or normally closed), the pulse parameter changes the output to the opposite status for the specified duration. For example, if the output is normally open, and pulse is set for 25 seconds, the SMS message triggers an event that closes the output for 25 seconds, and then returns it to its normal state.

b. Enter the number of seconds for which the event will occur.

For more information about SMS activation of outputs refer to chapter : " using the CS-47 after installation ".

3.5 Triggering the System

The System parameters required for arming or disarming the company's system include the following:

Trigger type

Trigger confirmation parameters

Alarm message parameters

In default state the system is triggered which means it checks the inputs and sends SMS, when system is not triggered no messages will be sent.

To define these System parameters, perform the following steps:

1. Click the **Output** tab.

2. In the **Trigger System** area, select the types of triggers by which the outputs can be operated. It is possible to select more than one option.

Options are:

- SMS

- Key

3. In the **Delay Time** field, define the number of seconds after the system is triggered that it will actually be armed.

4. Select **Trigger Confirmation** as relevant.

If it is selected, continue to Step 5 (to define the Phone Number field).

If it is not selected, go to Step 8 (to define the audible alarm).

5. In the **Phone Number** field, enter the phone number to which an SMS will be sent confirming that the System has been triggered on or off.

6. In the **Alarm off –message** field, enter the text of the SMS confirming that the alarm has been disarmed.

Note: This message can contain up to 15 characters, as noted in the **Chars Left** field.

7. In the **Alarm on ±message** field, enter the text of the SMS confirming that the alarm has been armed.

Note: This message can contain up to 15 characters, as noted in the **Chars Left** field.

The screenshot shows a software window titled "CS4721/06/04 C:\Program Files\CS47\CS47 default.dat". It has four tabs: "Input", "Output", "Miscellaneous", and "Communication". The "Communication" tab is active.

OUTPUT INFO

User password: ☒ Output 1 on GSM Fail
Must be 4 characters in length.

Enable SMS Control	N.O.	N.C.	Pulse	Time [Seconds]
<input type="checkbox"/> 1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="1"/>
<input type="checkbox"/> 2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="1"/>
<input type="checkbox"/> 3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="1"/>
<input type="checkbox"/> 4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="1"/>

TRIGGER INFO

Trigger system
☐ SMS
☐ Key Delay time: [Seconds]

☐ Trigger confirmation

Phone number:

System off - message: Chars. left:

System on - message: Chars. left:

Buttons at the bottom: To CS47, Load file, Save file, From CS47, Exit.

3.6 Configuration of the miscellaneous page

The screenshot shows a software window titled "CS4721/06/04 C:\Program Files\CS47\CS47 default.dat". It has four tabs: "Input", "Output", "Miscellaneous" (selected), and "Communication". The "Miscellaneous" tab contains several configuration sections:

- Power Fail Message:** Includes an "Enable" checkbox (unchecked), a "Phone number" field with "0", a "Message" field with "POWER FAIL", an "Interval" field with "0" [Minutes], and a "Chars. left" field with "5".
- Power Restore Message:** Includes an "Enable" checkbox (unchecked), a "Phone number" field with "0", a "Message" field with "POWER RESTORE", an "Interval" field with "0" [Minutes], and a "Chars. left" field with "2".
- Test Message:** Includes an "Enable" checkbox (unchecked), a "Phone number" field with "0", a "Message" field with "GSM O.K.", an "Interval" field with "0" [Hours], and a "Chars. left" field with "7". There is also an "SMS request" checkbox (unchecked).
- Phone line:** Includes an "Enable" checkbox (unchecked) for "Failed message" with a field "LINE FAIL" and "Chars. left" of "6". It also includes an "Enable" checkbox (unchecked) for "Restored message" with a field "LINE O.K." and "Chars. left" of "7".

At the bottom, there are five buttons: "To CS47", "Load file", "Save file", "From CS47", and "Exit".

3.6.1 Configuration of the "low power" message :

In the **Low Power** area, define the parameters of the SMS message that is sent if System power drops below 9.5 volts:

Select the **Enable** checkbox.

In the **Phone number** field, enter the phone number to which the SMS message will be sent.

In the **Message** field, enter the text of the SMS message.

In the **Interval** field, enter the number of minutes at which the SMS messages will be sent. As long as this field is set to a value greater than 0, the SMS message is sent repeatedly, until the power flow returns to normal.

Note: This message can contain up to 15 characters, as noted in the **Chars Left** field.

Do the same for "power restore " message.

3.6.2 Configuration of the "Test message" area

In the **"Test message"** area, define the parameters of the SMS message that is sent if the System is functioning correctly.

Note: In order to receive messages as defined in the System OK area, the user must send the Program Password to the system. This means that only a user with the System Administrator password may activate such messages.

a. Select the relevant option for sending messages. There are three possible configurations:

- **SMS request** selected –the system sends the message at the administrator's request.
- **Enable** selected –the message is sent automatically at a predefined interval.
- Both **SMS request** and **Enable** selected –the system sends messages both at a predefined interval, and at administrator's request

b. In the **Phone number** field, enter the phone number to which the SMS message will be sent.

c. In the **Message** field, enter the text of the SMS message.

d. If **Enable** was selected in Step 2a, the SMS message is sent repeatedly, at a predefined interval. In the **Interval** field, enter the number of hours at which the SMS message will be sent.

Note: This message can contain up to 15 characters, as noted in the **Chars Left** field.

3.6.3 Configuration of the "phone line " area

In this area you define the parameters of the SMS that will be sent when the PSTN line fail and when it restores.

a. Select the **Enable** checkbox.

b. In the **Phone number** field, enter the phone number to which the SMS message will be sent.

c. In the **Message** field, enter the text of the SMS message.

d. In the **Interval** field, enter the number of minutes at which the SMS messages will be sent. As long as this field is set to a value greater than 0, the SMS message is sent repeatedly, until the power flow returns to normal.

Note: This message can contain up to 15 characters, as noted in the **Chars Left** field.

Do the same for "phone line restored " message.

3.6.4 Add prefix number

In case the external application dials to a phone number in the same area code it doesn't use a prefix number, you can have a problem since the unit dials from a cellular line and needs the prefix number.

So when the number doesn't start with a zero the unit understands that there is a prefix missing and will automatically add the programmed prefix. If the number does start with a zero that no prefix will be added

- a. Select the **Enable** checkbox.
- b. In the "add prefix : field write the prefix number (area code)

3.7 Communication page

The screenshot shows a software window titled "CS4721/06/04 C:\Program Files\CS47\CS47 default.dat". It has four tabs: "Input", "Output", "Miscellaneous", and "Communication", with the "Communication" tab selected. The interface includes several controls: a "Cellular dial prefix" section with a large text input field, "Remove", "Remove all", and "Add cellular prefix" buttons, and a "Cut Prefix" checkbox with a small text input field. On the right, there is a "Change program password" checkbox with a text input field, a "Select port:" dropdown menu set to "2", a "Program password:" text input field, and a "Connection type" section with radio buttons for "RS232" (selected) and "Mobile" (with an associated text input field). At the bottom, there are five buttons: "To CS47", "Load file", "Save file", "From CS47", and "Exit".

3.7.1 cellular dial prefix

In this area you can select a prefix number for a cheaper call routing. When the unit detect the prefix number that was programmed in this field the unit will direct the call to the GSM line although a PSTN line is connected.

3.7.2 communication with the unit

“change program password” – entering a new password for programming the unit.

“Program password” – In this field you have to enter the password that is already in the CS-47, if the wrong password is entered you wont be able to program the unit.

“Select port “ – selecting witch serial port to use

“Connection type “ - the connection to the unit can be either by RS232 serial port or by remote using a cellular modem, in this case you have to enter the number of the sim card witch is in the unit.

3.8 File Options

There are four options for handling the file containing the configured System parameters. These options are as follows:

- **To CS47** – to download the configuration to the CS47.
- **Load File** – to load a saved configuration.
- **Save File** – to save the current configuration for later use.
- **From CS47** – uploads a file from the CS47 to the local computer.

These buttons appear at the bottom of each window in the user interface. After configuring the System parameters as required, select the relevant option.

4 Using the CS47 after it was installed

4.1 Sending SMS Messages

With the CS47, it is possible to send SMS messages to four different output devices, to turn the devices on or off.

Note: *It is only possible to send messages if the system has been so configured.*

Compose SMS messages to be sent to the Mobile Bridge according to the following guidelines:

- Messages can be sent from any ordinary mobile phone.
- Password – the system is case-sensitive; enter the password accordingly.
- Messages are sent to the mobile phone number of the relevant unit
- The System switches from the landline to the cellular phone only after the fourth digit (including the phone prefix) has been entered. The System must recognize the phone prefix dialed, or it will not switch to the cellular phone.
- Mobile programming period
 - If a voice call comes in during this period, the system does not respond. Since it has switched to data mode, it will only respond to a data call.
 - During this period, the System waits one minute for the data call to be received. If no data call is received in this time period, the System reverts to voice mode.
 - After the mobile programming period is finished, the Mobile Bridge returns to Bridge mode.
- Pulse configuration – if the pulse option was defined during System configuration, then SMS messages will trigger System outputs accordingly.

4.2 Output operation by SMS

For messages regarding the various outputs, the message must consist of the following:

User password –must be four characters (lower-case only)

Output number –the number of the relevant output (1-4),as defined during System configuration (refer to “Configuring System Outputs”).

Relevant option

n –turn the system on (lower-case only)

f –turn the system off (lower-case only)

The message may not have any spaces:

(User password)(Output number)(Option)

Example:

acac1n

In this example, **acac** is the user password, **1** is the output number, and **n** turns the output on.

4.3 Activating and Deactivating the System

Users can activate or deactivate the Mobile Bridge in one of two ways:

- With a electrical switch key – activate or deactivate the System manually.
- With an SMS message – activate or deactivate the System from a remote location. In this case, the SMS message must be constructed as follows:

- <User Password>on – turn the system on
- <User Password>off – turn the system off

During the cellular programming period (the time during which SMS messages are sent to program the System), the Mobile Bridge will not function for outgoing calls. Only the landline can be used for outgoing calls during this period, which lasts for two to three minutes. However, when SMS messages are sent to control outputs, the Mobile Bridge functions as usual.

Note: Spaces are not allowed in either case.

4.4 Changing the User Password

To change the User Password (Default 9999), send an SMS message to the system. This SMS message must consist of the following components:

(Old password)(USD sign)(New password)

Example:

9999\$1234

In this example, **9999** is the old user password, **\$** is inserted as a delimiter, and **1234** is the new user password.

4.5 Handling Received SMS Messages

The Mobile Bridge sends SMS messages to the user if the status of the relevant output has changed.

For example, the system can be configured to send an SMS message to the user if the office door has been opened or closed without authorization.

If such a message is received, the user should take whatever steps are necessary.

CROW LIMITED WARRANTY

(CROW) warrants this product to be free from defects in materials and workmanship under normal use and service for a period of one year from the last day of the week and year whose numbers are printed on the printed circuit board inside this product.

CROW's obligation is limited to repairing or replacing this product, at its option, free of charge for materials or labor, if it is proved to be defective in materials or workmanship under normal use and service. CROW shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than CROW.

There are no warranties, expressed or implied, of merchantability or fitness for a particular purpose or otherwise, which extend beyond the description on the face hereof. In no case shall CROW be liable to anyone for any consequential or incidental damages for breach of this or any other warranty, expressed or implied, or upon any other basis of liability whatsoever, even if the loss or damage is caused by CROW's own negligence or fault.

CROW does not represent that this product can not be compromised or circumvented; that this product will prevent any person injury or property loss or damage by burglary, robbery, fire or otherwise; or that this product will in all cases provide adequate warning or protection. Purchaser understands that a properly installed and maintained product can only reduce the risk of burglary, robbery or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss or damage as a result. Consequently, CROW shall have no liability for any personal injury; property damage or any other loss based on claim that this product failed to give any warning. However, if CROW is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, CROW's maximum liability shall not in any case exceed the purchase price of this product, which shall be the complete and exclusive remedy against CROW.



ELECTRONIC ENGINEERING LTD.

ISRAEL

57 Hamelacha St.
Holon 58855 Israel.
Tel. +972-3-5569937
Fax. +972-3-5592981
e. support@crow.co.il
w. www.thecrowgroup.com

USA

2160 North Central Road,
Fort Lee, NJ 07024, USA
Tel. +12019440005
Fax. +12019441199
e. support@crowelec.com
w. www.crowelec.com

AUSTRALIA

429 Nepean Hwy. Brighton East
VIC 3187 Australia
Tel. +61-3-9596-7222
Fax. +61-3-9596-0888
e. crow@crowaust.com.au
w. www.crowaust.com.au

LATIN AMERICA

5753 N.W 151st Street,
Miami Lakes, FL33014, USA
Tel. +1-305-823-8700
Fax. +1-305-823-8711
e. sales@crowlatinamerica.com
w. www.crowlatinamerica.com

ITALY

VIA Giulianello 4/14
00178 ROMA, ITALY
Tel. +39-0676-12912
Fax. +39-0676-12601
e. info@deatronic.com

POLAND

VIDICON 01-231
Warszawa
Ul.Plocka 17 POLAND
Tel. +48-22-562-3000
Fax. +48-22-562-3030
e. vidicon@vidicon.pl